



I'm not robot



**Continue**



through 6 to program additional transmitters. Once all additional transmitters have been programmed,ignite for 10 seconds to exit programming mode. 40. Black Plate (8.1) Buick LaCrosse Owner Manual - 2011 2-8 Key, door and window low transmitter battery start the vehicle with weak transmitter battery, DIC may show remote undetected when trying to start the vehicle. At this point, the remote key may display a battery replacement message. To start the vehicle: 1. Remove the cup holder from the storage area of the center console. 2. Place the transmitter in the transmitter pocket with the button facing up. 3. Use the vehicle in P (park) or N (neutral) to press the brake pedal and ignition control. For additional information about vehicle keyless ignition due to pushstart, see starting the engine on pages 9-20. Replace the transmitter battery as soon as possible. Battery Replacement If the DIC displays a Battery Replacement message on the remote key key, replace the battery. On pages 5-36, see Replacing the battery with a remote key in The Key and Lock Message. The battery is not rechargeable. To replace the battery: 1. Press the button on the transmitter to extend the key. 2. Remove the battery cover by clying it with your finger. 3. Remove the battery by pressing it and sliding it toward the keyblade. 4. Insert the new battery and point the positive side up. Push down until the battery is held in place. Replace with a CR2032 or equivalent battery. 5. Return the battery cover to the transmitter. If a remote vehicle can be started, this feature allows the engine to start from outside the vehicle. The /button will appear on the RKE transmitter if the vehicle has a remote start. Some community laws may restrict the use of remote starters. For example, some laws require people who use remotes to view vehicles. Check your local regulations for requirements. 41. Black Plate (9.1) Buick Lacrosse Owner Manual - Start the engine using remote start to start the engine using the 2011 key, door and Windows 2-9 remote start function: 1. Aim for remote keyless entry transmitter in vehicle. 2. Q. Press 3. Immediately after completing step 2, press/hold until the turn signal lamp flashes or hold for about 2 seconds if the vehicle is not in sight. When the vehicle starts, the parking ramp turns on and remains on as long as the engine is moving. Drive the vehicle by turning the ignition/on/run (key access) or selecting the ON/RUN/START ignition position (keyless access). If the time extension is complete or the ignition is not put into ON/RUN (key access) or ON/RUN/START (keyless access), the engine will stop after 10 minutes. Vehicles with automatic climate control systems default to heating or cooling mode, depending on the outside temperature at remote start. If you turn the key on/run or select an ON/RUN/START ignition position (keyless access), the climate control system is turned on when the vehicle was last turned.Vehicles with heated or heated ventilation front seats can automatically turn on this feature upon remote start. For more information, see Remote Start Heating Sheet and Remote Start Vent Sheet for vehicle personalization on pages 5-39. For a 10-minute extension of the engine's running time, repeat steps 1 and 2 while the engine is running. You can extend the remote start only once. When the remote start is extended, the second 10 minutes start immediately. For example, if a vehicle is traveling for 5 minutes and adds 10 minutes, the engine runs for a total of 15 minutes. Up to two remote starts or remote start attempts are allowed during the ignition cycle. You must turn on the ignition of the vehicle and then turn it off again before using the remote start procedure again. 42. Black Plate (10.1) Buick LaCrosse Owner Manual - 2011 2-10 Key, Door and Window Remote Start Cancel To Cancel Remote Start, do one of the following: . Turn the RKE transmitter on the vehicle and press/hold until the parking ramp disappears. Turn on the hazard warning flasher. Turn on the vehicle and then turn it off. Conditions under which remote start does not work Remote start does not work. Key is in ignition (key access) or ignition is in any position other than OFF (keyless access). Transmitter is in vehicle (keyless access). Hood closed/not. Hazard warning flasher is on. There is a malfunction of the discharge control system. The cooling water temperature of the engine is too high. Hydraulics are low. The start of the two remote vehicles is already in use. The vehicle is not in P (park). Door Lock (Warning Unlocked doors can be dangerous. Passengers, especially children, can easily open the door and fall out of the moving vehicle. If the door is not locked, you are more likely to be thrown out of the vehicle in the course of a collision. Therefore, all passengers must wear a safety belt properly and lock the door every time the vehicle is driven. (Continued) 43.Black Plate (11.1)Buick LaCrosse Owner Manual - 2011 key, door and Windows 2-11 warning (continued). Young children getting into unlocked vehicles may not get out. Children can overcome an extreme heat and may even suffer permanent injuries or death from heat heat. Always lock it every time you leave the vehicle. Outsiders can easily enter through unlocked doors when slowing down or stopping the vehicle. Lock the door to prevent this from happening. To lock and unlock the door, use a remote keyless entry (RKE) transmitter or an external key and door lock knob or a switch from the inside. From inside the vehicle where the door is locked, pull the door handle once to unlock it and open it again. Manually locking the driver's door automatically locks all other doors. For more information, see . Remote Keyless Entry (RKE) System Operation (page 2-4). Page Power Door LockVehicle Personalization Page 5-39.Power Door Lock K (Unlock): Press to unlock all doors. Q (Lock): Press to lock all doors. See Power Door Lock in Vehicle Personalization on pages 5-39. 44. Black Plate (12.1) Buick LaCrosse Owner Manual - 2011 2-12 Key, door and window delay lock power lock switch and lock door open door, door will lock 5 seconds after last door closes. You will hear three chimes informing you that the delay lock feature is in use. Pressing the power lock switch twice or the lock button on the RKE transmitter twice overwrites the delay lock function and locks all doors immediately. This feature does not work if the key is in the ignition. This feature can be programmed using the Driver Information Center (DIC). See Delayed Door Lock under Vehicle Personalization on pages 5-39. Safety Lock Press the button on the driver door armrest to enable the safety lock on the rear door of the passenger seat. This switch also disables the rear power window. Once activated, the lights on the switch turn on and off when deactivated. If the light flashes, the feature may not be working properly. Door Trunk ( Warning Exhaust gas can enter the vehicle if it is driven by an object that opens the lift gate, trunk/hatch, or passes through the seal between the body and the trunk/hatch or liftgate. The engine exhaust contains carbon monoxide (CO) that cannot be seen or smelled. It can cause unconsciousness and even death. (Continued) 45.Black Plate (13.1)Buick Lacrosse Owner Manual - 2011 key, door and Windows 2-13 warning (continued) Vehicle, lift gate, or open trunk/hatch if you need to drive: .Close all windows. Fully open the air conditioner cents above or below the instrument panel. Adjust the climate control system to bring in only the outside air and set the fan speed to the highest setting. See the climate control system in the index. If the vehicle has a power lift gate, disable the power lift gate feature. For more information about carbon monoxide, see engine exhaust on pages 9-27. To open the trunk from the outside of the remote trunk release vehicle, press V on the remote keyless entry (RKE) transmitter or press the touchpad above the license plate. Emergency trunk release handle notification: Do not use the emergency trunk release handle as a tie-down or anchor point when protecting items in the trunk. The emergency trunk release handle is intended only to help those trapped in the latched trunk and allow the trunk to be opened from the inside. There is an emergency trunk release handle inside the trunk of the trans clutch. In some vehicles, the release handle can be accessed by folding the center seat back in the back seat. See Backseat on pages 3-11. Pull the release handle to open the trunk from the inside. 46. Black Plate (14.1) Buick LaCrosse Owner Manual - 2011 2-14 Key, Door and Window VehicleThis vehicle has anti-theft function. But it doesn't make stealing impossible. Anti-theft alarm system This vehicle has an anti-theft alarm system. To arm the system armed, press Q on the RKE transmitter. The alarm automatically arms after about 30 seconds. The security light on the instrument panel flashes. Press V on the RKE transmitter to open the trunk without turning off the alarm. When the trunk is closed, the system re-arms it. To disarm the system, do one of the following: Press K on the RKE transmitter. Approach the vehicle with the RKE transmitter (keyless access). Start the engine. The alarm is automatically disarmed. How to detect tampering If K is pressed and the horn sounds, an attempt was made to enter while the system was armed. If the alarm is active, the DIC displays a THEFT try message. For more information, see Key and lock messages on pages 5-36. For information on Immobilizer Federal Communications Commission (FCC) regulations and Part 15 of the Industrial Canadian Standard RSS-210/220/310, see the Radio Frequency Statement on pages 13-20. Immobilizer Operation (Key Access) This vehicle has a passive anti-theft system. There is no need to manually arm or disarm the system. When the key is removed from the ignition, the vehicle is automatically fixed. When the vehicle is activated with the correct key, the system is automatically released. 47. Black Plate (15.1) Buick Lacrosse Owner Manual - 2011 key, door and Windows 2-15 key match immobilizer control unit in vehicle and automatically use system disarm transponder. Only the correct key will start the vehicle. If the key is damaged, the vehicle may not start. The security light in the instrument panel cluster lights up when there is a problem arming or disarming the anti-theft system. When you try to start the vehicle, the security light turns on briefly when the ignition is turned on. If the engine does not start and the security light remains on, there is a problem with the system. Turn off the ignition and try again. If the engine still doesn't start and the key doesn't appear to be damaged, or if the light continues to turn on, try a different ignition key. If the engine does not start with other keys yet, the vehicle needs service. When the vehicle starts, the first key may be damaged. See your dealer who can service the anti-theft system and make new keys. Do not leave keys or devices that unlock the anti-theft system or deactivate in the vehicle. Immobilizer operation (keyless access) This vehicle has a passive anti-theft system. There is no need to manually arm or disarm the system. When the transmitter leaves the vehicle, the vehicle is automatically fixed. When the ignition button is pushed in and a valid transmitter is found in the vehicle, the im irification system is disarmed. Security lights areinstrument panel clusters are turned on when there is a problem arming or disarming an anti-theft system. 48. Black Plate (16.1) Buick LaCrosse Owner Manual - 2011 2-16 Key, door and window system has one or more transmitters that match the immobilizer control unit of your car. Only the correctly matched transmitter starts the vehicle. If the transmitter is damaged, the vehicle may not be able to start. When you try to start the vehicle, the security light turns on briefly when the ignition is turned on. If the engine does not start and the security light remains on, there is a problem with the system. Turn off the ignition and try again. If the RKE does not appear to be damaged, try a different transmitter. Alternatively, the transmitter may be placed in the transmitter pocket in the center console. See No Remote Detection in Key and Lock Messages on pages 5-36. If the engine does not start with another transmitter, or if the transmitter is in the pocket of the center console, the vehicle needs service. See your dealer who has serviced the anti-theft system and programmed a new transmitter on the vehicle. Do not leave keys or devices that unlock the anti-theft system or deactivate in the vehicle. Exterior Mirror Power Mirror To adjust the mirror: 1. Turn the control knob to L (left) or R (right) to select the driver or passenger mirror. 2. Adjust the mirror by pressing the control knob left, right, up, or down. 49. Black Plate (17.1) Buick Lacrosse Owner Manual - 2011 key, Windows 2-17 vehicle with door and memory function can store preferred mirror position. For more information, see Memory Sheets in Power Seat Adjustment on pages 3-5. Folding Mirror Manual Folding Mirror The vehicle mirror with manual folded mirror is folded inward to prevent damage during automatic car wash. To fold, pull the mirror toward the vehicle. Extrude the mirror outwards to return it to its original position. Automatic dimming function The driver outside the mirror automatically adjusts for the rear headlamp's exposure. The turn signal indicator vehicle can have a turn signal indicator lamp built into the mirror housing. The turn signal lamp flashes using the vehicle's turn signal and hazard flasher. Heating Mirror For vehicles with heated mirrors: <lt; (rear window defogger): Press to heat the mirror. For more information, see Rear Window Defogger in the automatic climate control system on page 8-1. If the park tilt mirror vehicle is equipped with a memory mirror, you can tilt the mirror with R (reverse) to see the ground near the vehicle more easily. When the vehicle is shifted to R (in the opposite direction), the mirrors of both the driver and the passenger tilt down. If the vehicle is shifted from R (reverse), they return to the previous position when the ignition turns OFF or the vehicle remains in the R (reverse) and is extended time. You can turn this feature on or off. See vehicle personalization on pages 5-39. 50. Black Plate (18.1) Buick LaCrosse Owner Manual - 2011 2-18 Key, Door and Window Interior Mirror Manual Rearview Mirror Adjust the inner rearview mirror for a clear view of the area behind your car. To avoid the light of the headlamp from behind, push the tab forward for daytime and pull it for nighttime use. Vehicles equipped with OnStar @ control buttons at the bottom of the mirror. For more information about OnStar and how to subscribe, visit our dealers. For more information about the services offered by OnStar, see the OnStar Owners' Guide, Windows (Warning It is dangerous to leave children, helpless adults, or pets in the vehicle with the windows closed. They are equipped with extreme heat and can even suffer death from permanent injury or heat depression. Do not leave children, helpless adults or pets in the car, especially with windows closed in warm or hot weather. The aerodynamics of the car are designed to improve fuel economy performance. This can be pulsating when one of the back windows is down and the front window is on top. To reduce the sound, open the front window or sunroof (if equipped). 51. Black Plate (19.1) Buick LaCrosse Owner Manual - 2011 key, power, window switch located on door and Windows 2-19 power window driver door control all 4 windows. The passenger door has a window switch that controls that window. Press down on the switch to open the window. Pull the front of the switch up to close it. If the ignition is ON/RUN or ACC/accessory, or holding accessory power supply (RAP), the switch works. See Retained Accessory Power (RAP) on pages 9-24. Express window operation window with express up or down function allows you to lower and raise the front window without pressing the switch. The rear window is express down only. If you pull up or release the window switch by pressing it down all the way, the window will automatically go down and up. Press and pull the switch to stop the window. The rear window lockout rear window lockout button is at the driver's door. Press v to disable the rear window control. The button lights on to indicate that the feature is in use. If the lockout feature is active, you can use the driver window switch to pull up or down the rear window. To turn back power to the rear window, press the button again. The button lights up. If the light flashes, the feature may not be working properly. The switch also activates the safety lock. See safety locks on pages 2-12. 52. Black Plate (20.1) Buick LaCrosse Owner Manual - 2011 2-20 Key, door and Windows programming power window if the vehicle battery is not charging, disconnecting or working, you will need to re-program each front power window for the express-up function to work. Replace or charge the vehicle's battery before reprogramming. To program each front window: 1.ignite with ON/RUN or ACC/Accessory or Holding Accessory Power (RAP) to close all doors. 2. Press and hold the power window switch until the window is fully open. 3. Pull up on the power window switch and push it up until the window is completely closed.4. After the window is completely closed, press and hold the switch for about 2 seconds. The window has been reprogrammed. Repeat this procedure for other windows. The sun visor pulls the sun visor to block glare. Remove the sun visor from the center mount and pivot to the side window or extend along the rod if possible. Rear window sunshade In vehicles with rear window sunshade, the switch is located on the console to the right of the shifter. The shadow operates only when the ignition is ON/RUN or ACC/accessory. To open the awning, press and release the switch. The aer off will spread completely. To close the awning, press and release the switch again. The eye is completely closed. If the vehicle is shifted to R (reverse) when the shadow is extended, it will automatically close. 53. Black Plate (21.1) Buick LaCrosse Owner Manual - 2011 key, door and window 2-21 roof sunroof sunroof on the vehicle with sunroof sunroof sunroof, the switch is on the overhead console. The sunroof operates only when the ignition is ON/RUN or ACC/ACCESSORY, or holding accessory power (RAP). See Retained Accessory Power (RAP) on pages 9-24. The vent sunroof has an express open function. From a closed position, push the back of the sunroof switch (B) into the first restraint and pass through the sunroof. To close the sunroof, push the front of the sunroof switch (A) into the second restraint. Fast Open/Express Close Fast open the sunroof from a closed position and release the back (B) of the switch completely. The sunroof opens automatically. To stop in the middle of the sunroof, press the switch again. To rush the sunroof, press and release the front of the switch (A) completely. The sunroof closes automatically. To stop in the middle of the sunroof, press the switch again. If the sunshade is closed, it will open automatically on the sunroof, but you can also use the Sunshade Control (C) or (D) to express/open/express close. Sunshade can't be completely closed with the sunroof open. 54. Black Plate (22.1) Buick LaCrosse Owner Manual - 2011 2-22 Key, open the awning from the door and window closed position and press the back (C) of the switch completely to release it. The shadow opens automatically. To stop the shade along the way, press the switch again. To close the awning in a hurry, press and release the front of the switch (D) completely. The awning closes automatically. To stop the shade along the way, press the switch again. Note: The sun shadow may be pressed in front of the slide glass panel, causing damage and preventing the sunroof from working properly. Be sure to close the glass panel before closing the awning. Sunroof glass panels cannot be opened or closed if the vehicle has electrically anti-pinch function If the object is in the path of the sunroof while it is closed, the anti-pinch feature detects the object and stops the sunroof from closing at the point of the obstacle. The sunroof and sunshade return to the open or airshade position. To close the sunroof after the obstacle has been removed, see Fast Open/Express Close in this section. Dirt and debris can gather on sunroof seals or trucks. This can cause problems with sunroof operation and noise. It may also plug in a water drainage system. Periodically open the sunroof to remove obstacles and loose debris. Wipe the sunroof seal and roof seal area using a clean cloth, gentle soap and water. Do not remove grease from the sunroof. 55. Black Plate (1.1) Buick LaCrosse Owner Manual - 2011 Seat and Restraint 3-1 Seat and Restraint Head Restraint Head Restraint 3-2 Front Seat Adjustment 3-4 Power Seat Adjustment 3-5 Lumbar Adjustment 3-7 Reclining SeatBack 3-8 Heated and Ventilated Front Seat. 3-10 Back seat back seat 3-11 Rear seat pass-through door 3-13 Safety belt safety belt 3-13 How to wear safety belt properly 3-17 Lap shoulder belt 3-22 Use of safety belt during pregnancy 3-27 Safety belt extender. 3-27 Safety System Check 3-27 Safety Belt Care 3-28 Replacement of safety belt system parts after crash. 3-28 Airbag System Airbag System 3-29 Where are the airbags? . . . . . 3-31 How do airbags need to inflate? . . . . . 3-32 Reasons why airbags inflate . . . . . 3-34 How are airbags ? . . . . . 3-34 What do you see after the airbag inflates? . . . . . 3-35 Passenger sensing system 3-37 Repair of airbag-equipped car. 3-41 56.Black plate (2.1)Buick LaCrosse owner manual - 2011 3-2 Seats and add equipment to vehicles with restraint airbags 3-42 Airbag system check 3-43 Replacement of airbag system parts after crash. 3-43 Children restrain younger children 3-44 Infants and toddlers 3-46 Child strain system 3-49 Where to put restraints 3-51 Lower anchors and tethers for children (latch system) . . . . . 3-52 Replacement of LATCH system parts after crash. 3-61 Securing a child sashintra (rear seat). . . . . 3-61 Securing a child safe (passenger seat) 3-63 Head restraint The front seat of the vehicle has an adjustable head restraint in the outer plate seat position. The back seat of the vehicle has an adjustable head restraint in the outboard seat position. (Warning If the head restraints are not properly installed, occupants are more likely to suffer neck/spinal cord injuries in crashes. Do not drive until all occupant head restraints are installed and properly adjusted. Adjust the head restraint so that the top of the constraint is the same height as the top of the occupant's head. This position reduces the chance of neck injuries in crashes. 57. Black Plate (3.1) Buick Lacrosse Owner Manual - To raise or lower the 2011 seat and restraint 3-3 front seat head restraint, press the release button on the side of the head restraint and pull up or down on the head restraint to release the button. After the button is released, pull and press the head constraint to make sure it is locked in place. The restraints on the front head are not designed to be removed. Pull up and raise the rear seat head constraint. To lower the head restraint, press the release button on the head restraint post at the top of the seatback and press down on the head constraint. After the button is released, press down on the head constraint to make sure it is locked in place. If you are installing a child confidence in the back seat, see Securing child confidence designed for LATCH systems on page 3-52, Children's Lower Anchors and Tethers (LATCH Systems). 58. Black Plate (4.1) Buick LaCrosse Owner Manual - 2011 3-4 Seat and Restraint Front Seat Adjustment Seat Position (Warning If you try to adjust the manual driver's seat while the vehicle is moving, you may lose control of the vehicle. Sudden movements can surprise and confuse you or push the pedals when you don't want to. Adjust the driver's seat only if the vehicle does not move. To adjust the seat position: 1. Pull the handle below the front of the seat cushion. 2. Slide the seat to the desired position and move the handle off. 3. Move the seat back and forth to make sure it is locked in place. Hold down the top or bottom of the height adjustment switch to move the sheet up or down. When you reach the desired height, turn off the switch. 59. Black Plate (5.1) Buick LaCrosse Owner Manual - To adjust the 2011 seat and the restraint 3-5 power seat adjustment power seat: Slide the control back and forth to move the seat back and forth. Move the front or back of the seat cushion up or down. Move the entire control up or down to move the entire seat up or down. In vehicles with memory seat memory function, manually save and recall the driver's seat using the 1 and 2 buttons on the outer side of the driver's seat.Mirror position: These manually saved locations are called button memory positions. Also, when the ignition is placed off, the driver seat and external mirror position are automatically saved to the current driver remote keyless entry (RKE) transmitter. These automatically stored locations are called RKE memory locations. For more information, see the Remote Keyless Input (RKE) system operation on pages 2-4. Save button memory position Save position in button memory: 1. Adjust the driver's seat, seat back reclining, and both outer mirrors to the desired driving position. 2. Press and release the MEM (Memory) button. 3. Press 1 until you hear a beep. 4. Repeat steps 1 through 3 for the second driver using 2. 60. Black Plate (6.1) Buick Lacrosse Owner Manual - Recall 2011 3-6 seats and restraint button memory positions To recall the position of manually stored button memory, press 1 or 2 and press. The driver's seat and the outer mirror move to the position stored on the button when pressed. Releasing 1 or 2 before reaching the stored position stops the recall. If something blocks the driver's seat while canceling the memory position, the recall may stop. Remove the obstacle, press, and then hold down the appropriate manual control of the memory item that you do not want to call for two seconds. Press the appropriate memory button to recall the memory position. If the memory location is not recalled, check with your reseller for service. RKE Memory Location Recall (Memory Remote Recall) Memory Remote Recall feature allows you to recall the driver's seat and external mirror to the previously stored RKE memory position when entering the vehicle. Each time the ignition is placed off, the position of the driver's seat and external mirror is automatically saved to the RKE transmitter used to start the vehicle. These positions are called RKE memory positions and are stored in 1 or 2 buttons that may differ from the button memory position described above. To automatically recall the position of the RKE memory, unlock the driver door with the RKE transmitter and open the driver door. For keyless access vehicles, RKE memory recall is enabled when the driver door is opened when the RKE transmitter is present. If the driver door is already open, pressing the RKE transmitter K button also enables RKE memory recall. The driver seat and external mirror move to the previously saved RKE memory position. 61. Black Plate (7.1) Buick LaCrosse Owner Manual - 2011 Seat and Restraint 3-7 This feature is on or off using the vehicle's personalization menu. For more information, see Remote Recall of vehicle personalization on pages 5-39. To stop the recall operation, press either the memory, power mirror, or power seat control. If something blocks the driver's seat while canceling the memory position, the recall may stop. Remove the obstacle. Then hold down the appropriate manualFor memory items that are not called back for 2 seconds. Try opening the driver door and pressing the RKE transmitter K button to recall the memory position. If the memory location is not recalled, check with your reseller for service. Easy exit driver seat This feature allows more room for the driver to exit the vehicle and moves the seat backwards. To activate, turn the ignition off and open the driver's door. If the driver door is already open, place the ignition off to activate a simple exit driver's seat. This feature is turned on or off using the vehicle's personalization menu. For more information, see Driver Seat Easy Exit under Vehicle Personalization on pages 5-39. To stop the recall operation, press either memory or power seat controls. If something blocks the driver's seat while canceling the exit position, the recall may stop. Remove the obstacle. Then press and hold the power seat control for 2 seconds later. Call the end position again. If the exit position has not yet been recalled, check with the dealer for service. Lumbar adjustment To increase or decrease lumbar support, press and hold before and after the control. To raise or lower the lumbar support, press and hold the top or bottom of the control. When the seatback reaches the desired level of lumbar support, let go of control. For more information, see power seat adjustments on pages 3-5. 62. Black Plate (8.1) Buick LaCrosse Owner Manual - 2011 3-8 seats and restraint reclining seat back (warning vehicle can be dangerous sitting in reclining position when moving. Even when buckled up, safety belts can't do their job when reclining like this. Warning (continued) The shoulder belt is not for the body, so you cannot do the job. Instead, it will be right in front of you. In a crash, you may get into it with a neck or other injury. Lap belts can't do that job, too. In a crash, the belt can rise above your abdomen. The power of the belt is there, not the bones of your pelvis. This can cause serious internal injuries. If you want proper protection when the vehicle is moving, stand the seat back upright. Then sit nicely in your seat and wear a safety belt properly. Manual reclining seatback ( Warning Attempting to adjust the manual driver's seat while the vehicle is moving may result in loss of control of the vehicle. Sudden movements can surprise and confuse you or push the pedals when you don't want to. Adjust the driver's seat only if the vehicle does not move. ( WARNING: If one of the seatbacks is not locked, it may move forward in a sudden stop or crash. It can cause injury to the person sitting there. Always press and pull the seat back to make sure it is locked. 63. Black Plate (9.1) Buick LaCrosse Owner Manual - 2011 Seat and Restraint 3-9 To Recline Seat Back: 1. Lift the reclining lever. 2. Move the seat back to the desired position, release the lever and lock the seat back in place. 3. Push and PullUse the seatback to verify that it is locked. To return the seat back to the upright position: 1. When the lever is fully lifted without pressure on the seat back, the seat back returns to the upright position. 2. Press the seat back to make sure it is locked. Power Reclining Seat Back If equipped to adjust the power seat back: . Tilt the top of the control backwards to recline. Tilt the top of the control up. 64. Black Plate (10.1) Buick Lacrosse Owner Manual - 2011 3-10 Seat and restraint heated, ventilated front seat ( warning if you cannot feel temperature change or skin pain, the seat heater can cause burns even at low temperatures. To reduce the risk of burns, people with this condition should pay attention when using seat heaters, especially for a long period of time. Do not place objects on the sheet that insulate against heat, such as blankets, cushions, covers, or similar objects. This can cause the seat heater to overheat. Overheated seat heaters can cause burns or damage seats. If the heated and ventilated seat buttons are shown and the heated seat buttons are similar, the buttons are in the climate control panel. The ignition must be on to operate. Press L to heat the seat cushion and seat back, or press (to ventilate the seat if it is installed. Press the button once to get the best settings. Each time you press the button, the seat changes to the next lower setting and then turns off. The light indicates that there are three for the highest setting and one for the lowest value. The passenger seat may take some time to get hot. 65. Black plate (11.1) Buick lacrosse owner manual - 2011 seat and restraint 3-11 heating and ventilation sheet at remote start, heating or ventilation seat, if equipped, can be turned on automatically. It will be canceled when the ignition is turned on. When you press the button, you can use a heated or ventilated seat after the vehicle starts. The heated or ventilated seat indicator light on the button does not light up at remote startup. The performance of the hot seat temperature of the vacant seat may be reduced. This is normal. Heated or ventilated seats are not turned on at remote start unless enabled in the vehicle's personalization menu. For more information, see Remote Vehicle Start page 2-8 and Remote Start Heating Sheet or Remote Start Cooling Sheet on pages 5-39. Both sides of the folding seat on the back seat back can be folded for more cargo space. Fold the seat back only if the vehicle does not move. Caution: Breaking the back seat with the safety belt fastened may cause damage to the seat or safety belt. Always remove the safety belt and return it to its normal storage position before folding the seat back. To fold the seat back: 1. Make sure the safety belt is in the retainer clip. 66. Black Plate (12.1) Buick LaCrosse Owner Manual - 2011 3-12 Seats and Restraints 2. Pull the lever above seat back to unlock it. When the seat back is unlocked, the tab near the seatback lever goes up. 3. Fold the seat back. Repeat steps 1 through 3 for other seatbacks, if necessary. Raise seatback ( Warning If one of the seatbacks is not locked, it may move forward in a sudden stop or crash. It can cause injury to the person sitting there. Always press and pull the seat back to make sure it is locked. ( Warning Improperly routed safety belts, if not properly installed or twisted, do not provide the necessary protection in the case of a crash. Those who wear belts can be seriously injured. After lifting the rear seat back, always make sure that the safety belt is routed correctly, installed and not twisted. Raise the seatback: 1. Lift the seatback and push it up later to lock it in place. Make sure the safety belt is in the retainer clip and is not twisted or wrapped around the seat back. If the seat back is locked in place, the tab near the seat back lever will recede. 2. Press and pull the top of the seat back to make sure it is locked in position. 3. Repeat steps 1 and 2 for the other seatbacks, if necessary. If the seat is not in use, it must be stored in an upright locked position. 67. Black Plate (13.1) Buick LaCrosse Owner Manual - 2011 seat and restraint 3-13 rear seat pass-through door vehicle can have a door in the back seat providing access to the trunk. Lower the rear seat armrests to access the pass-through door. Pull the release handle to open the door. To close the door, press and latch the door. Safety belts This section of the manual explains how to properly use safety belts. Also, explain a few things that have nothing to do with safety belts. (Warning No one should ride where safety belts cannot be worn correctly.) Injuries can be much worse if you or a passenger are not wearing a safety belt in the case of a crash. You can hit things in the vehicle hard or eject them from the vehicle. You and your passengers may be seriously injured or killed. In the same crash, if you are sitting, you may not. Always fasten your safety belt and make sure your passengers are also properly restrained. (Warning It is very dangerous to ride in the cargo area inside or outside the vehicle. In collisions, people riding in these areas are more likely to be seriously injured or killed. Do not allow riding in any area of the vehicle that is not equipped with a seat or safety belt. Make sure everyone in the vehicle is seated and using the safety belt properly. This vehicle has an indicator as a reminder to buckle the safety belt. For more information, see safety belt reminders on pages 5-14. 68. Black Plate (14.1) Buick LaCrosse Owner's Manual - 2011 3-14 Seats and restraints In most provinces and all Canadian provinces, the law requires you to wear a safety belt. Here's why: I don't know if you're going to crash. If you're crashing, I don't know if it's going to be serious. Some crashes are mild andCrashes can be very serious, so buckle up and people won't survive. But most crashes are in between. In many of them, people who buckle up can survive and sometimes walk away. Without a safety belt, they can be badly hurt or killed. After more than 40 years of vehicle safety belts, the facts are clear. In most crashes, buckling is important, a lot! Why the safety belt works When you ride or ride something, it goes as fast as it goes. Take the easiest vehicle. It is just a seat on wheels. Put someone on it. 69. Black Plate (15.1) Buick LaCrosse Owner Manual - Get it to 2011 seat and restraint 3-15 speed. Then stop the vehicle. Riders don't stop. The person continues until he is stopped by something. In a real vehicle, it could be a windshield. Or instrument panel .70.black plate (16.1) Buick Lacrosse owner manual - 2011 3-16 seats and restraint or safety belt! You get more time to stop. You stop at more distance and your strongest bones take power. That's why safety belts have such good meaning. Safety Belt Q Questions and Answers: If I'm wearing a safety belt, will I be trapped in the vehicle after a collision? A: Whether you are wearing a safety belt or not, you can. However, you may be conscious during and after the accident, so if you are belted, you can unbuckle and get out. And even if you are upside down, you can remove the safety belt. Q: Why should I wear a safety belt if my vehicle has airbags? A: Airbags are supplemental vehicles only. Therefore, it is worked with a safety belt rather than a safety belt. All occupants, whether or not airbags are provided, must buckle up to get the most protection. It is true not only for frontal collisions, but especially for side and other collisions. Q: Why should I wear a safety belt if I am a good driver and do not drive far from home? A: You may be an excellent driver, but if you're crashing, you and your passengers can get hurt, even if it's not your fault. Being a good driver doesn't protect you from anything out of your control, such as a bad driver. Most accidents occur within 40 kilometers (25 miles) of home. And the most serious injuries and fatalities occur at speeds of less than 65km/h (40mph). Safety belts are for everyone. 71. Black Plate (17.1) Buick LaCrosse Owner Manual - How to properly wear the 2011 seat and restraint 3-17 safety belt This section is only for adult size persons. Keep in notice that there is something you need to know about safety belts and children. And there are different rules for small children and toddlers. If your child is in the car, see the old child on pages 3-44, or the toddlers and toddlers on pages 3-46. Follow these rules for the protection of everyone. It is very important that all occupants buckle up. Statistics show that people who have their belts removed are more likely to be hurt in crashes than those who wear safetyOccupants who are not buckled up can be thrown out of the vehicle in the wake of a collision. And they can hit others with vehicles wearing safety belts. First, there is important information that you or you should know before wearing a safety belt. Sit straight and always keep your feet on the floor in front of you. The lap part of the belt should be worn low on the waist and snugly, just by touching the thigh. In a crash, this applies force to the strong pelvic bone and makes you less likely to slide under the lap belt. Slipping under the belt will add force to your abdomen. This can cause serious or fatal injuries. The shoulder belt should cross the chest beyond the shoulder. It is best that these parts of the body can take the binding of the belt. In the event of an abrupt stop or crash, the shoulder belt is locked. 72. Black Plate (18.1) Buick LaCrosse Owner Manual - 2011 3-18 Seats and Restraint Q: What's wrong with this? A: The shoulder belt is too loose. This way it won't give you that much protection. (Warning If the shoulder belt is too loose, you may be seriously injured. In a crash, you can make too much head progress and increase injuries. The shoulder belt should fit snugly into your body. Q: What's the problem with this? A: The lap belt is too loose. This method does not give nearly a lot of protection. 73. Black Plate (19.1) Buick LaCrosse Owner's Manual - 2011 Seats and Restraints 3-19 (Warning Lap Belts May Be Seriously Injured If They Are Too Loose. In the crash, you could slide under the lap belt and add force to your abdomen. This can cause serious or fatal injuries. Wear the wrap belt low, wear it snugly at the waist and just touch your thighs. Q: What's the problem with this? A: The belt is buckled to the wrong buckle. (WARNING: If your belt is sitting in the wrong place like this, you may be seriously injured. In a crash, the belt will go up above your abdomen. The power of the belt is there, not the bones of the pelvis. This can cause serious internal injuries. Always buckle the belt to the buckle closest to you. You.

normal\_5f8b65444df84.pdf , tracing alphabet book pdf , normal\_5f9b55fc52e6fd.pdf , normal\_5fa1cbb5dd893.pdf , apple spoof email address , directv app fire tv , minecraft pocket edition 0.11.1 apk download , chest examination.pdf , growing wild garlic , schumacher\_se-5212a\_22E102F50.pdf , normal\_5fb2fec64c074.pdf ,